

ASD-10 Smoke Alarm

Brief user protocol



1. This detector has a **fixed battery**, it can **NOT** be removed.
2. **Activate:**
Activate the smoke detector within 14 months of the production date.
Place detector on base plate and turn right to "click" and
Press test button 1-2 sec [a few beeps] >> OK
3. **Normal situation:** Red LED flashes 1x per 4/5 minutes.
4. **Deactivate:** turn indicator on base plate to the left to "click"
5. **Signals:**
3 x beep every 40 seconds:
Detector is exposed to too much 'sun' light >> move!

1 x beep every 40 seconds:
Battery voltage drops >> smoke alarm must be replaced!
6. **IMPORTANT:** Regular maintenance!!
Maintenance =
Clean 1 x each month
Use the vacuum cleaner on all the openings of the smoke alarm +
Test 1 x a month
Test the smoke alarm by pressing the test button for about 2 sec.
[Not necessary to retrieve the detector from the ceiling]
7. **Important:** Please read supplied instructions for additional information.