


Procedure to add additional smoke and heat detectors to a group FIT-10YRF, FIT-230RF(L) smoke detectors and FITH-230RF(L) heat detectors:

1. Remove the connection code from all paired detectors.
 - Press the RF button on the side of your detector 5 times briefly
 - The red LED will light up 10 times to indicate that the code has been successfully removed.
2. Select the Master:
 - Press the RF button on the side of the selected Master for 5 seconds
 - The red LED will light up to indicate that the Master has generated a unique code.
 - The pairing procedure ends after 150 seconds when the red LED goes out.
 - You therefore have 150 seconds to pair the other smoke detectors to the Master.
3. Pairing the other smoke detectors:
 - Press the RF button on the side of the other detectors briefly twice
 - The red LED light will light up 5 times to indicate that the detector has been successfully paired to the selected Master.
4. You have 150 seconds to pair with the other detectors. If you are unable to pair all detectors to the Master within this time, you can extend the pairing time as follows:
 - Press the RF button on the side of the selected Master for 5 seconds
 - The red LED light will light up again for 150 seconds.
 - You now have another 150 seconds to pair the other smoke detectors that have not yet been paired to the new Master.
5. Test all detectors and the pairing of the detectors before hanging the detectors on the ceiling.

Adding an additional smoke alarm


1. Clean memory on all smoke alarm

Red LED flashes 10 times

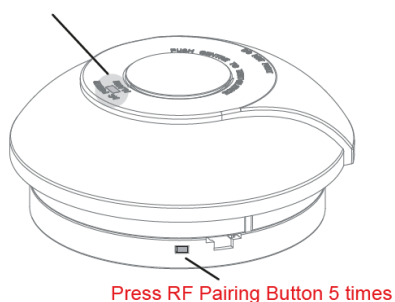



2. Choose a alarm as Master for pairing

Red LED will illuminated for 150seconds

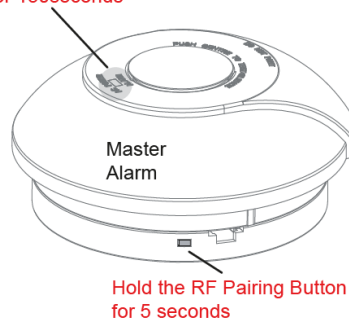

3. Add all subordinate alarm to the RF network

Red LED flashes 5 times

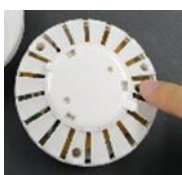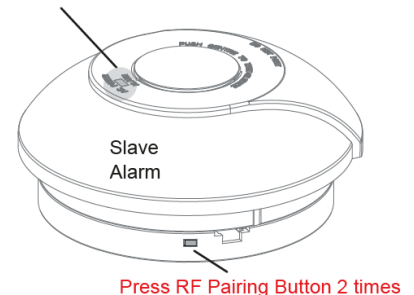

The pairing button on the FIT-10YRF is located on the bottom of the smoke detector.